

select But\_ON. Change the properties, with height set to Fill Parent, width to Fill Parent, and text to ON. Now select But\_OFF and change the properties, with height set to Fill Parent, width to Fill Parent, and text to OFF.

Drag another button and place it below HorizontalArrangement2 (i.e., ON and OFF buttons). In the 'All Components' pane, rename it as But\_Close. In the properties pane, change the height to 10 percent, width to Fill Parent, and text to CLOSE.

In Palette > Connectivity, drag BluetoothClient and drop it into the Viewer pane. It will appear as a non-visible component.

Download the extension TaifunTools from <https://puravidaapps.com> and import it into the device. Drag and drop it into the Viewer pane as a non-visible component.

The final screenshots are shown in Fig. 8. If there is any deviation from these, correct it or repeat the steps. Pay careful attention to the relative positions in the screen above. This completes the Designer part of the device.

**The blocks mode.** Click on 'blocks' shown in the top-right corner of the screen. The left-hand side of the screen will resemble Fig. 9.

If the screen does not resemble Fig. 10, then corrections or adjustments are required in designer mode.

Click on Screen1 and select when Screen1.Initialize block. Drag it match it with when Screen1.Initialize block. KeepScreenOn.Further Click on ListPicker1 and select when ListPicker1.BeforePicking. Again, click on ListPicker1, and this time, select set ListPicker1.Elements.to and match it with BeforePicking. Click on BluetoothClient1 and select Bluetooth1.AddressesAndNames and match it at the open end.

Click on ListPicker1 again and

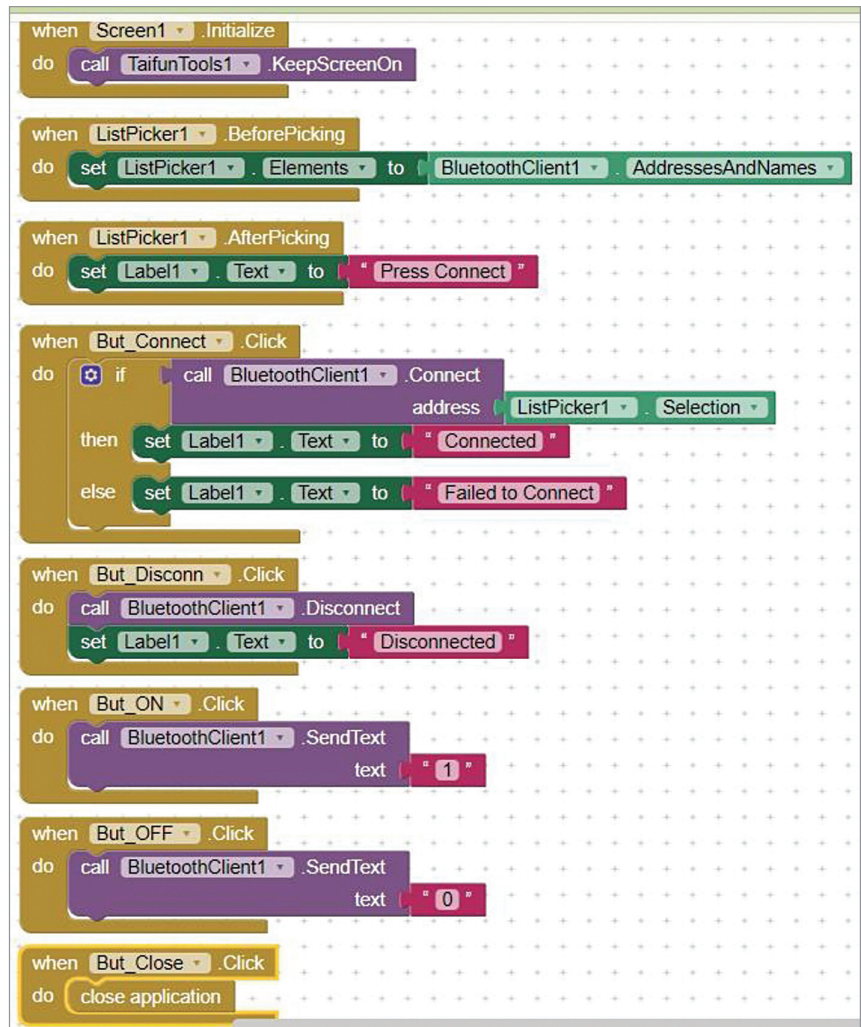


Fig. 10: The complete picture of setting

select When ListPicker1.AfterPicking. Click on Label1 and select Set Label1.Text.to and match it. Click on Built-in > Text and select the empty box (the topmost one). Drag it and match it with the open end. In the empty box, type 'Press Connect.'

Click on But\_Connect and select when But\_Connect.Click. Go to Built-in > Control and select the if.. then.. else block and match it. Click on BluetoothClient1 and select call Bluetooth1.Connect and match it with the if block. Click on ListPicker1 and select ListPicker1.Selection and match it with the Address socket. Click on Label1 and select set Label1.Text.to and match

it with the Then block. At the open end, match an empty text box. In the box, type 'Connected.' In the else block, match a set Label1.Text.to block, add an empty text box, and type 'Failed to Connect.'

Click on But\_Disconn and select When But\_Disconn.Click. Click on Call BluetoothClient1.Disconnect and match it. Below that, match set Label1.Text.to and add a text box with the text 'Disconnected.'

Click on But\_ON and select When But\_ON.Click. Click on BluetoothClient1 and select Call BluetoothClient1.SendText and match it. Take an empty text box and match it at the open end. In the text box,