



# Don't Be A Loser!

You don't know how much you don't know.

Read

**electronics** FOR YOU

to keep up-to-date with the tech world



To subscribe, visit [efy.in](http://efy.in) or contact us at: 011-4059660  
Email: [support@efy.in](mailto:support@efy.in)

OR

Scan This Code



Also available at all leading magazine outlets

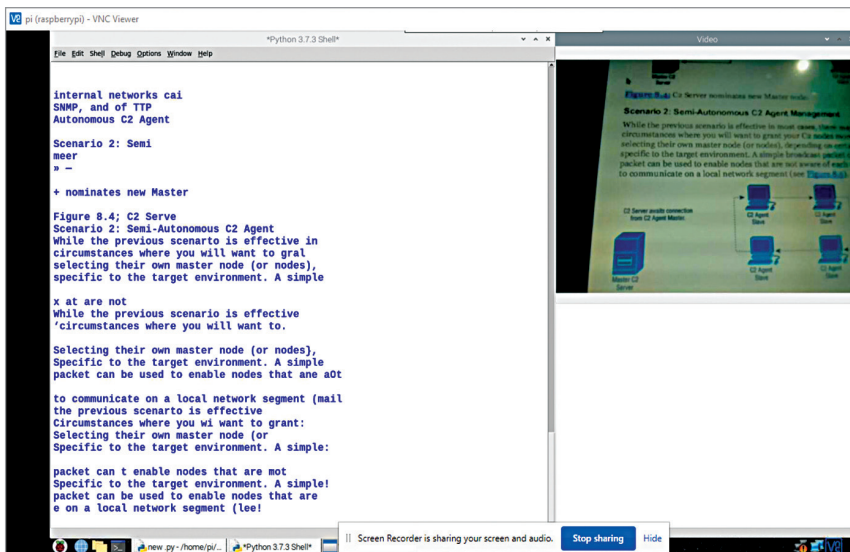


Fig. 3: Testing code

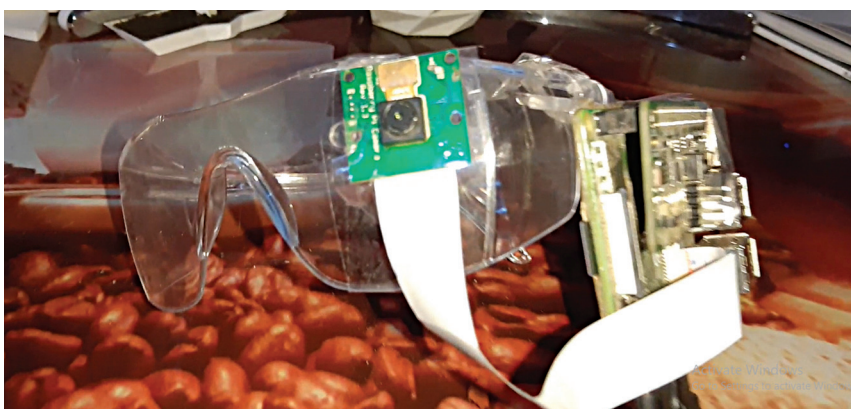


Fig. 4: Author's device attached with the camera on eyeglass



Fig. 5: Author testing the device

the path previously set. Then call PyTesseract that will open the saved video frame for processing the image

and extracting text from it. By using eSpeak, the speech engine will convert all that text into audio and read it.

**Note.** For a clear voice output that does not sound robotic you can use paid or other text-to-speech services like gtts, watson speech, etc.

## Testing

Fix the camera onto the eyeglass and run the code. On putting a book in front of the camera and waiting for a few minutes without any movement, it will automatically start reading the book. To hear it, connect your earphones to the Raspberry Pi headphone TRRS jack or any speaker with amplifier. You can also connect any Bluetooth earphone. **EFY**

Ashwini Kumar Sinha is an electronics hobbyist and tech journalist at EFYi